




MINI ΧΕΙΡΙΣΤΗΡΙΟ RF SIMPLICITY ΜΕ ΜΑΓΝΗΤΙΚΗ ΒΑΣΗ



Τεχνικά χαρακτηριστικά

- Σήμα εξόδου: RF(2.4GHz)
- Τάση λειτουργίας: 3VDC(CR2032)
- Ρεύμα λειτουργίας: < 5mA
- Ρεύμα αναμονής: < 2μA
- Χρόνος αναμονής: 24 μήνες
- Απόσταση λειτουργίας: 30 μέτρα
- Θερμοκρασία λειτουργίας: -30°C~55°C
- Διαστάσεις: Ø 43×Y17mm
- Βάρος: 24g


Διαστάσεις

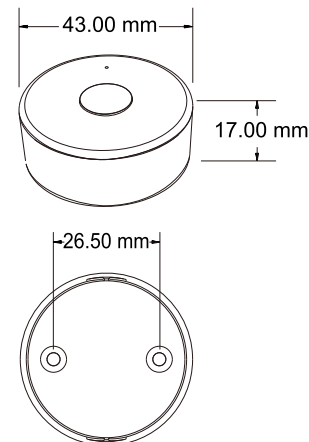

Πως να συγχρονίσετε το χειριστήριο με τον Controller

Πιέστε το match key στον controller, και εντός 5 δευτερολέπτων πιέστε το κουμπί on/off.

Λειτουργίες χειριστηρίου/ Τοποθέτηση μπαταρίας

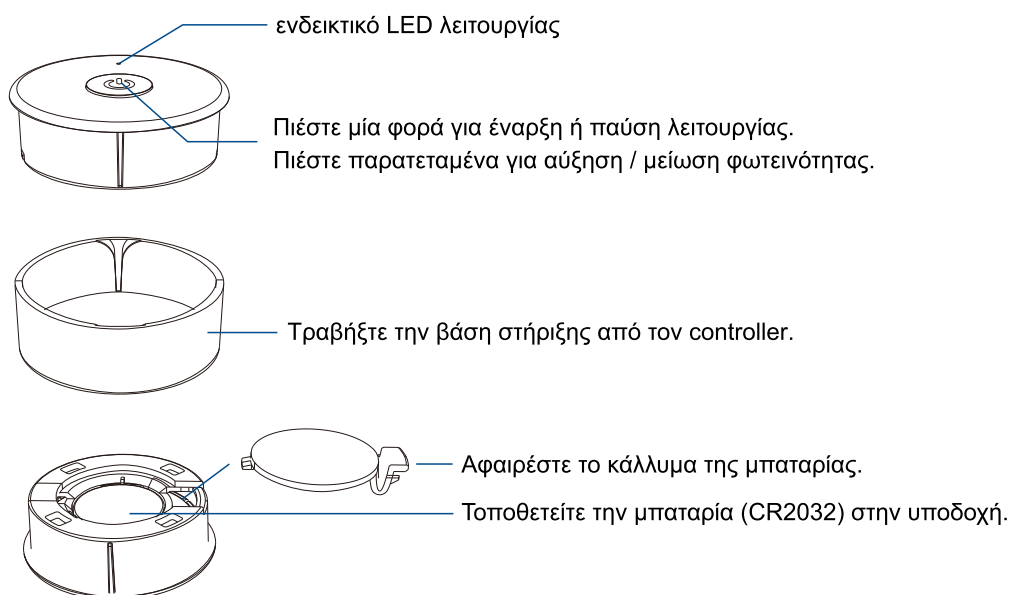

Τοποθέτηση χειριστηρίου

Μπορούμε να τοποθετήσουμε τον controller με τρεις διαφορετικούς τρόπους. :

- 1: Απευθείας τοποθέτηση σε μαγνητική επιφάνεια, (μαγνητική βάση)
- 2: Στερέωση βάσης σε μη μαγνητική επιφάνεια με βίδες.
- 3: Τοποθέτηση βάσης σε μη μαγνητική επιφάνεια με ταινία διπλής όψεως.

Δυσλειτουργία και αντιμετώπιση

Δυσλειτουργία	Αιτία	Αντιμετώπιση
Καμία λειτουργία	1. Εξασθενημένη μπαταρία 2. Εκτός απόστασης ελέγχου 3. Το χειριστήριο και ο controller δεν είναι συγχρονισμένοι	1. Αλλάξτε μπαταρία. 2. Μειώστε την απόσταση ελέγχου 3. Συγχρονίστε το χειριστήριο με τον controller




MINI RF REMOTE CONTROL SIMPLICITY WITH MAGNETIC BASE



Technical Specifications

- Output signal: RF(2.4GHz)
- Working voltage : 3VDC(CR2032)
- Working current: < 5mA
- Standby current: < 2μA
- Standby time: 24 months
- Remote distance: 30m
- Working temperature: -30°C~55°C
- Dimension: Ø43×H17mm
- Weight: 24g


Dimensions

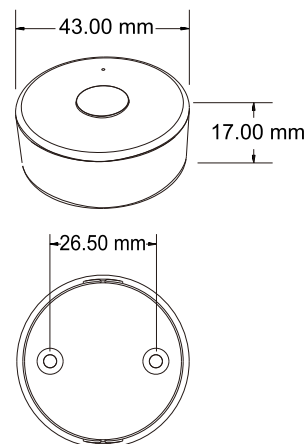

How to match the remote with Controller

Short press match key on the controller, within 5s press the on/off key on the remote.

Remote function / Battery installation

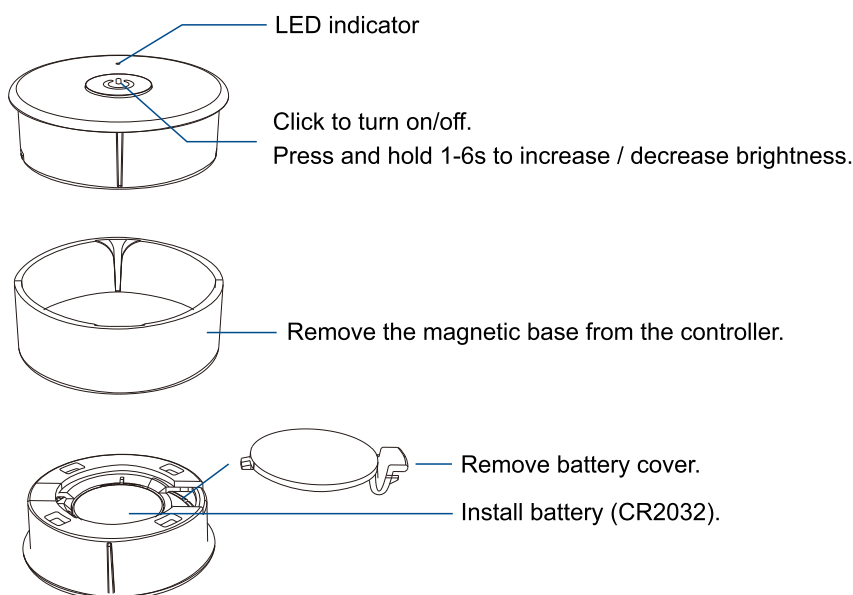

Remote control mounting.

Three options are offered for selection:

- 1: Direct mounting to a magnetic surface, (magnetic base)
- 2: Mount to a non magnetic surface with screws.
- 3: Mount to a non magnetic surface with double adhesive tape.

Malfunctions & troubleshooting

Mulfuctions	Causes	Troubleshooting
No response of the remote	1. The battery has no power. 2. Beyond controllable distance. 3. The controller did not match the remote.	1. Replace battery. 2. Reduce remote distance. 3. Re-match the remote.